



GV-Remote View for use with Blackberry Smartphones

With the GV-Remote View V1.1 and V1.2, you can remotely view live video, force output devices to be triggered, and start and stop monitoring from your BlackBerry phone.

System Requirements for GV-Remote View:

Handheld Device View	GV-Remote View V1.1 for BlackBerry Smartphone
OS Supported	BlackBerry OS 4.2.1 to 5.0
Port	Data port: 8866; HTTP port: 80
Protocol	TCP/IP (JPEG)
Functions	Video Streaming, I/O device control
Handheld Device View	GV-Remote View V1.2 for BlackBerry Smartphone
OS Supported	BlackBerry OS 5.0 to 6.0
Port	Data port: 8866; HTTP port: 80
Protocol	TCP/IP (JPEG)
Functions	Video Streaming, I/O device control, PTZ control

Installing GV-Remote View

Important: The version of GV-Remote View program on the software DVD is V1.0. To download GV-Remote View of version 1.1 and 1.2, please click [Here](#).

1. Insert the Surveillance System Software DVD into the computer. It runs automatically and a window pops up.
2. Click **Install V 8.4.0.0 System**, select **BlackBerry Smartphone Viewer**, and follow the on-screen instructions to complete the installation. The default installation directory is **C:\BBView**.
3. Through the synchronization program such as Desktop Manager, install **BBViewV1.alx** from the created installation directory to your BlackBerry. Consult the BlackBerry phone user's manual for how to install a program to the phone.

 



Activating the GV-Remote View Function

To allow remote access to GV-System, enable the **Create JPEG/GIF file(s)** function on the WebCam Server. On the main screen, click the **Network** button, select **WebCam Server**, click the **JPG** tab, and select **Create JPEG/GIF file(s)**. For details, see *General Settings* in *WebCam Server Settings* earlier in this chapter.

Connecting to GV-System

To connect your BlackBerry phone to GV-System, follow these steps:

1. Click the **GV-Remote View** icon  on your phone. The welcome page appears.
2. Select **Create Live Connection**. The Login page appears.

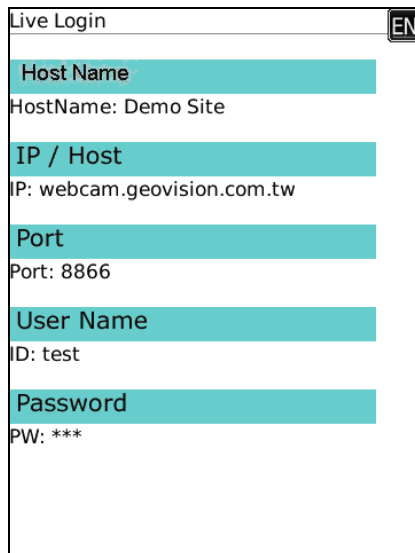


Live Login	EN
Host Name	HostName: Demo Site
IP / Host	IP: webcam.geovision.com.tw
Port	Port: 8866
User Name	ID: test
Password	PW: ***

3. Enter the IP address, port value (default value is 8866), a username and a password to log in GV-System.




4. Select **Connect** to start. Once the connection is established, the Camera List appears.

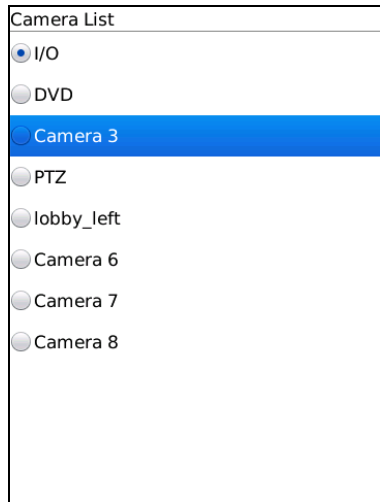

5. Select the desired camera and select **OK** to access the live view.
6. To change to another camera, select **Change Camera** and follow Step 5.

Forcing Outputs

1. To force any connected output devices, select a camera from the Camera List and select **IO Module**. The IO Module List appears.

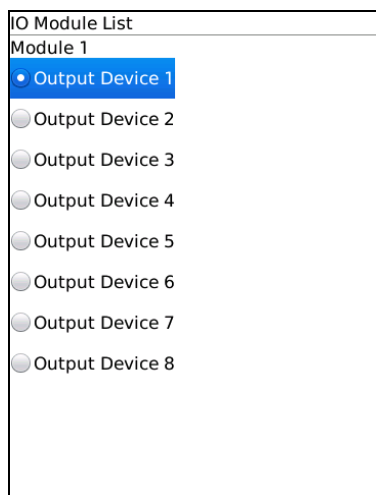










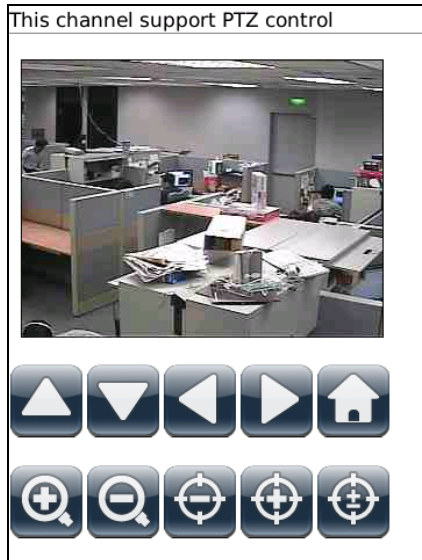

2. Scroll down to select the desired output device on the list, and push in the scroll wheel to select **Force Output**.
3. To force another output device, select **IO Module** again and repeat step 2.



PTZ Control

1. To access the PTZ functions, select a camera from the Camera List and select **PTZ control**. The PTZ control panel appears.



2. You can tap the direction buttons  and the zoom buttons  to control the camera. Tap the home button  to return to home position. You can also adjust the focus of the camera using the focus buttons  or tap the autofocus button .

Note: The PTZ control function is only supported in GV-Remote View V1.2.
